

4. ARRANGE THE FOUR SECTIONS SO THAT EACH END SPINE MATCHES UP WITH ITS CORRESPONDING LETTER PARTNER (A,A B,B C,C AND D,D).

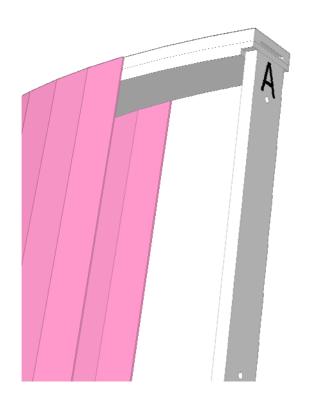

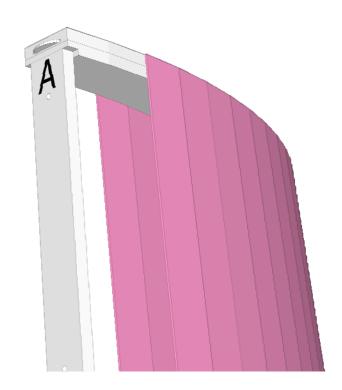

5. CAREFULLY SLIT THE PLASTIC ON EACH END OF EACH QUARTER SECTION. CAREFULLY PEEL BACK THE PLASTIC JUST ENOUGH TO EXPOSE THE HOLES THAT THE HARDWARE GOES THROUGH. YOU CAN REMOVE THE HANDWRITTEN LABELS IDENTIFYING LOCATION, TYPE OF SHADE AND DIMENSIONS. PLEASE MAKE SURE THAT NO RIBBON ON THE BOTTOM OF THE SHADE IS EXPOSED.



VSME INSTALLATION INSTRUCTIONS / BRA SALON / P4 OF 10